

Thank you for your purchase! At MSW we believe having essential accessories makes a good bike ride great. The MSW Coiled Cable with Resettable Combination and Bracket provides temporary or added security for quick errands or in conjunction with a higher security primary lock.

⚠ WARNING: CYCLING CAN BE DANGEROUS. BICYCLE PRODUCTS SHOULD BE INSTALLED AND SERVICED BY A PROFESSIONAL MECHANIC. NEVER MODIFY YOUR BICYCLE OR ACCESSORIES. READ AND FOLLOW ALL PRODUCT INSTRUCTIONS AND WARNINGS INCLUDING INFORMATION ON THE MANUFACTURER'S WEBSITE. INSPECT YOUR BICYCLE BEFORE EVERY RIDE. ALWAYS WEAR A HELMET.

⚠ WARNING: No bicycle lock is theft-proof. Cable locks offer security in the form of a deterrent, and should be used in conjunction with situational awareness for more effective protection. Cable locks should only be used for brief stops where the bicycle will not be left alone for extended periods of time. Use secure bicycle parking if you can and avoid leaving the bicycle in isolated or dimly lit areas. Secure the bicycle to an immovable object such as a bike rack or street furniture. For best results, run the cable through both wheels as well as the frame if possible.

For additional product and safety information go to: www.mswbike.com/safety.

COMPATIBILITY AND INTENDED USE

The MSW Resettable Combination Cable is intended to be used in addition to a lock with a high security rating or as a deterrent during brief stops where the bicycle will not be unattended for long periods of time. It can be used as added security for wheels or on automobile racks as well.

The MSW Resettable Combination Cable Lock Bracket included with the 12mm cable is intended to be used on round frame tubing with a diameter up to 1-1/8".

TOOLS

Phillips head screwdriver

INSTALLATION

⚠ WARNING: Do not mount the bracket and lock near moving parts like wheels and gears. Doing so could cause the lock and/or bracket to become entangled which could lead to a crash, serious injury to the rider, or damage to the bicycle.

Place the bracket on the frame or seatpost away from moving parts. With a Phillips head screwdriver, tighten the bracket nut and bolt until secure.

INSTALLING THE BRACKET

1. Loosen the bracket attachment strap by turning the adjustment screw counterclockwise until the strap can be completely removed.
2. Place the bracket on a tube of the bicycle frame with a diameter of up to 1-1/8".
3. Mount the bracket by inserting the adjustment strap and turning clockwise until secure.
4. Depress the two gray tabs simultaneously while sliding the lock body onto the bracket from the top or bottom.
5. Release gray tabs and ensure the lock is firmly "clicked" into position.
6. To remove lock follow step 4.

RESETTING THE COMBINATION LOCK

1. At the guide points on the top of the lock, set the combination to the factory preset 0000, and open the lock.
2. Twist the serrated round cylinder that the locking pin enters clockwise a quarter turn.
3. Set the desired combination, and rotate the serrated round cylinder counterclockwise into the original position.
4. Your combination is now set. To change the combination, open the lock again, and repeat steps 2 and 3.

ONGOING MAINTENANCE

Periodically check to make sure the lock bracket is properly secured to the bicycle.

WARRANTY PROCESS

If you and your shop think your MSW product is worthy of a warranty inspection, please return the product to the original place of purchase, accompanied by a sales receipt.

For complete warranty information, visit www.mswbike.com/safety/warranty.