

MSW SPH-204 SMARTPHONE HOLDER INSTRUCTIONS

Thank you for your purchase! At MSW we believe that having essential accessories makes a good bike-ride great—we hope this smart phone holder keeps you connected on your next ride.

FEATURES:

- Three models to fit phones with 4, 5, or 6" screens
- Touch-screen compatible interface
- Stash pocket for credit card, ID, cash, etc.
- Cleat system compatible; fits U-shaped brackets

⚠ WARNING: CYCLING CAN BE DANGEROUS. BICYCLE PRODUCTS SHOULD BE INSTALLED AND SERVICED BY A PROFESSIONAL MECHANIC. NEVER MODIFY YOUR BICYCLE OR ACCESSORIES. READ AND FOLLOW ALL PRODUCT INSTRUCTIONS AND WARNINGS INCLUDING INFORMATION ON THE MANUFACTURER'S WEBSITE. INSPECT YOUR BICYCLE BEFORE EVERY RIDE. ALWAYS WEAR A HELMET.

⚠ WARNING: Observe and obey traffic laws when riding your bike. Texting while riding is illegal and distracting, and could cause a crash resulting in serious injury. Navigation aids on smartphones should only be used as a periphery device, and should not be used in such a way that requires attention that distracts you from riding safely on streets and roads and in traffic. For additional product and safety information go to: www.mswbike.com/safety.

COMPATIBILITY AND INTENDED USE

The MSW Smartphone Holder is compatible with 1-1/8" steerer tubes and stem caps, and is intended to hold your Smartphone or other wireless device.

REQUIRED TOOLS

- 4mm hex wrench
- Hex wrench to fit your headset top cap

INSTALLING THE BRACKET

1. With the bike on the ground, use the appropriate hex wrench to remove the headset's top cap.
2. Install the accessory bracket directly underneath the top cap. Depending on how your bike is configured, there may be spacers between the bracket and stem.
NOTE: For a secure fit, there must be at least 1mm of steerer tube that extends into the bracket and your headset's top cap will feature a lip that engages the top side of the bracket. If your bike does not have steerer tube exposed above the stem or a top cap without a lip, your bracket will not be held securely.
3. Install the top cap and tighten the bolt until finger tight.
4. Finalize the position of the bracket and use the appropriate hex wrench to tighten the bolt until snug and the bracket cannot freely rotate.
5. Once mounted, you can adjust the angle of the accessory mount using a 4mm hex wrench.

USING THE PHONE SLEEVE

1. Slide the device into the sleeve.
2. Slide the sleeve cleat into the U-shaped bracket until it clicks.
3. Adjust the angle of the bracket as needed by loosening and retightening the 4mm hex bolt head.
4. Disengage the phone sleeve by pressing on the cleat tab and pulling away from the U-shaped bracket.

Periodically check to make sure the top cap bolt and MSW Smartphone Holder bracket bolt are secure.

LIMITED 2-YEAR WARRANTY

MSW warrants this new MSW product against defects in materials and workmanship for two (2) years from the original date of retail purchase by the consumer. This limited warranty is expressly limited to the repair or replacement of the original product, at the option of MSW, and is the sole remedy of the warranty. This limited warranty applies only to the original purchaser of the MSW product and is not transferable.

In no event shall MSW be liable for any loss, inconvenience or damage, whether direct, incidental or consequential or otherwise resulting from breach of any express or implied warranty or condition of merchantability, fitness for a particular purpose, or otherwise with respect to this product except as set forth herein. This warranty gives the consumer specific legal rights, and those rights and other rights may vary from state to state.

This warranty does not cover the following:

- Damage due to improper assembly or follow-up maintenance or lack of skill, competence or experience of the end user
- Products that have been modified, neglected, used in competition or for commercial purposes, misused or abused, involved in accidents or anything other than normal use
- Damage or deterioration to the surface finish, aesthetics or appearance of the MSW product
- Normal wear and tear



FITS PHONES WITH UP TO 4" SCREENS



TOUCH-SCREEN COMPATIBLE



STASH POCKET FOR CREDIT CARD, I.D., CASH, ETC.



CLEAT SYSTEM COMPATIBLE; FITS U-SHAPED BRACKETS

MSW SPH-204

- Labor required to remove and/or refit and re-adjust the product within the bicycle assembly
- Installation of components, parts, or accessories not originally intended for use with or compatible with MSW products

To the extent not prohibited by law, these warranties are exclusive and there are no other express or implied warranties or conditions including warranties or conditions of merchantability and fitness for a particular purpose.

WARRANTY PROCESS

We will happily back up our products if there is a problem that is our fault. If you and your shop think your MSW product is worthy of a warranty inspection, please return the product to the original place of purchase, accompanied by a sales receipt.

CONTACT US

MSW Cycles
6400 West 105th Street
Minneapolis, MN 55438

Phone: 1.800.346.0004
Web: www.mswbike.com
E-mail: info@mswbike.com

MSW
BICYCLE ACCESSORIES