

Thank you for your purchase! At MSW® we believe that having essential accessories makes a good bike ride great—we hope this MSW WindStream Inflator gets you back up and running quickly and easily should your next trip get sidetracked by a flat tire.

⚠ WARNING: CYCLING CAN BE DANGEROUS. BICYCLE PRODUCTS SHOULD BE INSTALLED AND SERVICED BY A PROFESSIONAL MECHANIC. NEVER MODIFY YOUR BICYCLE OR ACCESSORIES. READ AND FOLLOW ALL PRODUCT INSTRUCTIONS AND WARNINGS INCLUDING INFORMATION ON THE MANUFACTURER'S WEBSITE. INSPECT YOUR BICYCLE BEFORE EVERY RIDE. ALWAYS WEAR A HELMET.

For additional product and safety information go to: www.mswbike.com/safety.

COMPATIBILITY AND INTENDED USE

The MSW WindStream Inflator Head pushes on to Presta or threads onto Schrader valve tubes, and works with standard 3/8" threaded compressed air cartridges.

USING THE INFLATOR HEAD

SCHRADER VALVE

1. Do not install a cartridge until ready to inflate.
2. Place the wider, smooth end of the inflator head onto the valve, and thread it on in a clockwise direction until it is fully engaged.
3. Thread the cartridge into the knurled end of the inflator head until it is threaded fully. You may hear a hiss when the seal on the cartridge is punctured.
4. To inflate your tire, press down and compress the spring. You will hear the gas being released into the tire. Release tension to stop the flow of the gas. Do not remove the cartridge until all the gas is discharged.

⚠ WARNING: Releasing air from the cartridge rapidly will make the cartridge very cold. Avoid direct contact with skin.

5. Inflate to a pressure within the range recommended by the tire manufacturer on the tire's sidewall. Consult the cartridge manufacturer's website to see what pressure you can expect based on your tire size and cartridge size.

PRESTA VALVE

1. Do not install a cartridge until ready to inflate.
2. Make sure the valve is open. Place the wider, smooth end of the inflator head onto the end of the valve.
3. Thread the cartridge into the knurled end of the inflator head until it is threaded fully. You may hear a hiss when the seal on the cartridge is punctured.
4. To inflate your tire, press down and compress the spring. You will hear the gas being released into the tire. Release tension to stop the flow of the gas. Do not remove the cartridge until all the gas is discharged.
5. Inflate to a pressure within the range recommended by the tire manufacturer on the tire's sidewall. Consult the cartridge manufacturer's website to see what pressure you can expect based on your tire size and cartridge size.

ONGOING MAINTENANCE

Periodically check to make sure your tires are inflated to a pressure within the range recommended by the tire manufacturer. Please recycle empty cartridges.

⚠ SAFETY WARNINGS

- Never puncture a compressed air cartridge with anything other than an inflator head
- Keep compressed air cartridges away from heat above 120°F (49°C). A closed car or direct sunlight can reach a temperature higher than this. Overheating may rupture the cartridge
- Do not incinerate
- Do not completely unscrew the inflator head from the cartridge until the cartridge is completely empty. Doing so may cause the cartridge to become a projectile.
- Only use compatible cartridges that are in perfect condition
- As compressed air leaves the cartridge, it drops to a very low temperature and could cause frostbite to exposed skin
- Install and remove the inflator away from your face, body, or other people
- Do not inhale compressed gasses of any kind
- Keep cartridges and inflators out of reach of children
- Compressed gas cylinders CANNOT be transported on aircraft in checked or carry-on bags

LIMITED 2-YEAR WARRANTY

MSW warrants this new MSW product against defects in materials and workmanship for two (2) years from the original date of retail purchase by the consumer. This limited warranty is expressly limited to the repair or replacement of the original product, at the option of MSW, and is the sole remedy of the warranty. This limited warranty applies only to the original purchaser of the MSW product and is not transferable.

In no event shall MSW be liable for any loss, inconvenience or damage, whether direct, incidental or consequential or otherwise resulting from breach of any express or implied warranty or condition of merchantability, fitness for a particular purpose, or otherwise with respect to this product except as set forth herein. This warranty gives the consumer specific legal rights, and those rights and other rights may vary from state to state.

This warranty does not cover the following:

- Damage due to improper assembly or follow-up maintenance or lack of skill, competence or experience of the end user
- Products that have been modified, neglected, used in competition or for commercial purposes, misused or abused, involved in accidents or anything other than normal use
- Damage or deterioration to the surface finish, aesthetics or appearance of the MSW product
- Normal wear and tear
- Labor required to remove and/or refit and re-adjust the product within the bicycle assembly
- Installation of components, parts, or accessories not originally intended use with or compatible with MSW products

TO THE EXTENT NOT PROHIBITED BY LAW, THESE WARRANTIES ARE EXCLUSIVE AND THERE ARE NO OTHER EXPRESS OR IMPLIED WARRANTIES OR CONDITIONS INCLUDING WARRANTIES OR CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

WARRANTY PROCESS

If you and your shop think your MSW product is worthy of a warranty inspection, please return the product to the original place of purchase, accompanied by a sales receipt.

For complete warranty information, visit www.mswbike.com/safety/warranty.