

Thank you for your purchase! At MSW we believe that having essential accessories makes a good ride great—we hope this TigerMoth Headlight makes you and your bike visible while safely lighting the path on your next trip.

▲ WARNING: CYCLING CAN BE DANGEROUS. BICYCLE PRODUCTS SHOULD BE INSTALLED AND SERVICED BY A PROFESSIONAL MECHANIC. NEVER MODIFY YOUR BICYCLE OR ACCESSORIES. READ AND FOLLOW ALL PRODUCT INSTRUCTIONS AND WARNINGS INCLUDING INFORMATION ON THE MANUFACTURER'S WEBSITE. INSPECT YOUR BICYCLE BEFORE EVERY RIDE. ALWAYS WEAR A HELMET.

For additional product and safety information go to: www.mswbike.com/safety.

COMPATIBILITY & INTENDED USE

The TigerMoth Headlight is intended for commuting, casual riding, and running errands. It is not intended for aggressive off road use, downhill or extreme riding, or racing. It features a versatile, tool-free mount with a swivel, so you can mount it on handlebars or frame tubes up to 35mm in diameter, fork, or helmet.

INCLUDED PARTS

- 1 Headlight
- 1 Tool-free mount
- 1 USB charging cable

INSTALLATION

1. Wrap the rubber mounting strap around the part of the bike you wish to mount the light to, or your helmet. The arrows on the mount should point toward the front of the bike or helmet.
2. Pull the strap taut and slip the closest hole in the strap over the hook on the mount. The strap should be just tight enough that the light cannot move freely and will not slip if you go over a bump.
3. Slide the light onto the mount until it snaps into place.
4. Finalize the angle of the light by using the swivel and by rotating the mount.
5. To remove the light from the mount, depress the button on the side of the mount and slide the light off. To reattach, just slide it back on until it snaps into place.

USE

NOTE: You must charge the light fully before first use. Initial charging may take up to five hours. The light ships in a locked mode to prevent damage to the battery while in transit or on display. To unlock the light, press the on/off button continuously until the button turns blue.

The light features four modes: high, medium, low, and flashing.

1. To turn the light on, press the on/off button once but don't hold down.
2. To switch from one mode to the next, press the button once.
3. To turn the light off while in any mode, press and hold the on/off button for two seconds.
4. To enter flashing mode, press and hold the on/off button for three seconds.
5. The on/off button indicates how much of the battery's charge is remaining:
 - a. Green: 15–100%
 - b. Red: 0–15% (needs charging)

LOCK

1. Lock the light by holding the on/off button for six full seconds. Light will enter flashing mode, then turn off. The light is now locked.
2. To unlock, hold the button down until the indicator color changes from red to blue. Upon release, the light will turn on and is ready for normal use.

CHARGING

1. To charge the light, plug the charging cable into the USB port on your computer and into the back of the light.
2. When the on/off button changes from red to green, the light is fully charged and ready for use.

FEATURES

- Simple mode selection: high, medium, low, flashing
- Universal, tool-free attachment (fits 20–35mm)
- Output: 300 lumen (high)
- Run time: 2 hours (high), 10 hours (flashing)
- Internal battery with USB charging cable included

LIMITED 2-YEAR WARRANTY

MSW warrants this new MSW product against defects in materials and workmanship for two (2) years from the original date of retail purchase by the consumer. This limited warranty is expressly limited to the repair or replacement of the original product, at the option of MSW, and is the sole remedy of the warranty. This limited warranty applies only to the original purchaser of the MSW product and is not transferable.

In no event shall MSW be liable for any loss, inconvenience or damage, whether direct, incidental or consequential or otherwise resulting from breach of any express or implied warranty or condition of merchantability, fitness for a particular purpose, or otherwise with respect to this product except as set forth herein. This warranty gives the consumer specific legal rights, and those rights and other rights may vary from state to state.

This warranty does not cover the following:

- Damage due to improper assembly or follow-up maintenance or lack of skill, competence or experience of the end user
- Products that have been modified, neglected, used in competition or for commercial purposes, misused or abused, involved in accidents or anything other than normal use
- Damage or deterioration to the surface finish, aesthetics or appearance of the MSW product
- Normal wear and tear
- Labor required to remove and/or refit and re-adjust the product within the bicycle assembly
- Installation of components, parts, or accessories not originally intended use with or compatible with MSW products

TO THE EXTENT NOT PROHIBITED BY LAW, THESE WARRANTIES ARE EXCLUSIVE AND THERE ARE NO OTHER EXPRESS OR IMPLIED WARRANTIES OR CONDITIONS INCLUDING WARRANTIES OR CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

WARRANTY PROCESS

We will happily back up our products. If you and your shop think your MSW product is worthy of a warranty inspection, please return the product to the original place of purchase, accompanied by a sales receipt.

For complete warranty information, visit www.mswbike.com/safety.