

Thank you for your purchase!

▲ WARNING: Cycling can be dangerous. Bicycle products should be installed and serviced by a professional mechanic. Never modify your bicycle or accessories. Read and follow all product instructions and warnings including information on the manufacturer's website. Inspect your bicycle before every ride. Always wear a helmet.

For additional product and safety information go to: www.mswbike.com/safety.

TOOLS REQUIRED

#1 Phillips screwdriver for battery installation

INTENDED USE

To make the cyclist more visible in low light riding scenarios.

COMPATIBILITY

Fits handlebar diameters of 21.7mm to 31.8mm.

INSTRUCTIONS

Wrap the tail of the light around the handlebar and attach to tab (Fig. 1). Ensure the complete rubber tail is installed under the lip of the tab mount.



Figure 1

FUNCTIONS:

Click once – Steady ON

Click again – Flash

Click again – Strobe (quick double flash)

Click again – OFF

BATTERY REPLACEMENT

Unscrew the battery cover using a #1 Phillips screwdriver. Gently remove both batteries and replace them with two new CR2032 model button cell batteries. Be sure to install the new batteries with the (+) facing outward.

BATTERY WARNINGS

A coin-cell, lithium-ion battery is used in this device. If these guidelines are not followed, batteries may experience a shortened lifespan or may present a risk of damage to the device, fire, chemical burn, electrolyte leak, and/or injury.

- Do not leave the device exposed to a heat source or in a high-temperature location, such as in the sun in an unattended vehicle. To prevent the possibility of damage, remove the device from the vehicle or store it out of direct sunlight, such as in the glove box
- Do not disassemble, modify, remanufacture, puncture or damage the device or batteries
- Do not immerse or expose the device or batteries to water or other liquids, fire, explosion, or other hazard
- Do not use a sharp object to remove the batteries
- KEEP BATTERIES AWAY FROM CHILDREN
- NEVER PUT BATTERIES IN MOUTH. Swallowing can lead to chemical burns, perforation of soft tissue, and death. Severe burns can occur within two hours of ingestion. Seek medical attention immediately
- Replaceable coin-cell batteries may contain perchlorate material. Special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate
- Only replace batteries with correct replacement batteries. Using other batteries presents a risk of fire or explosion
- Do not operate the device outside of the temperature ranges specified in these instructions
- Contact your local waste disposal department to dispose of batteries in accordance with applicable local laws and regulations

ONGOING MAINTENANCE

Periodically inspect the mounting tab and rubber mounting strap for damage. Periodically make sure your light is securely mounted and in working order with fresh batteries.

WARRANTY PROCESS

If you and your shop think your MSW product is worthy of a warranty inspection, please return the product to the original place of purchase, accompanied by a sales receipt.

For complete warranty information, visit www.mswbike.com/safety/warranty.